bus wire: bare link wire soldered along the strip

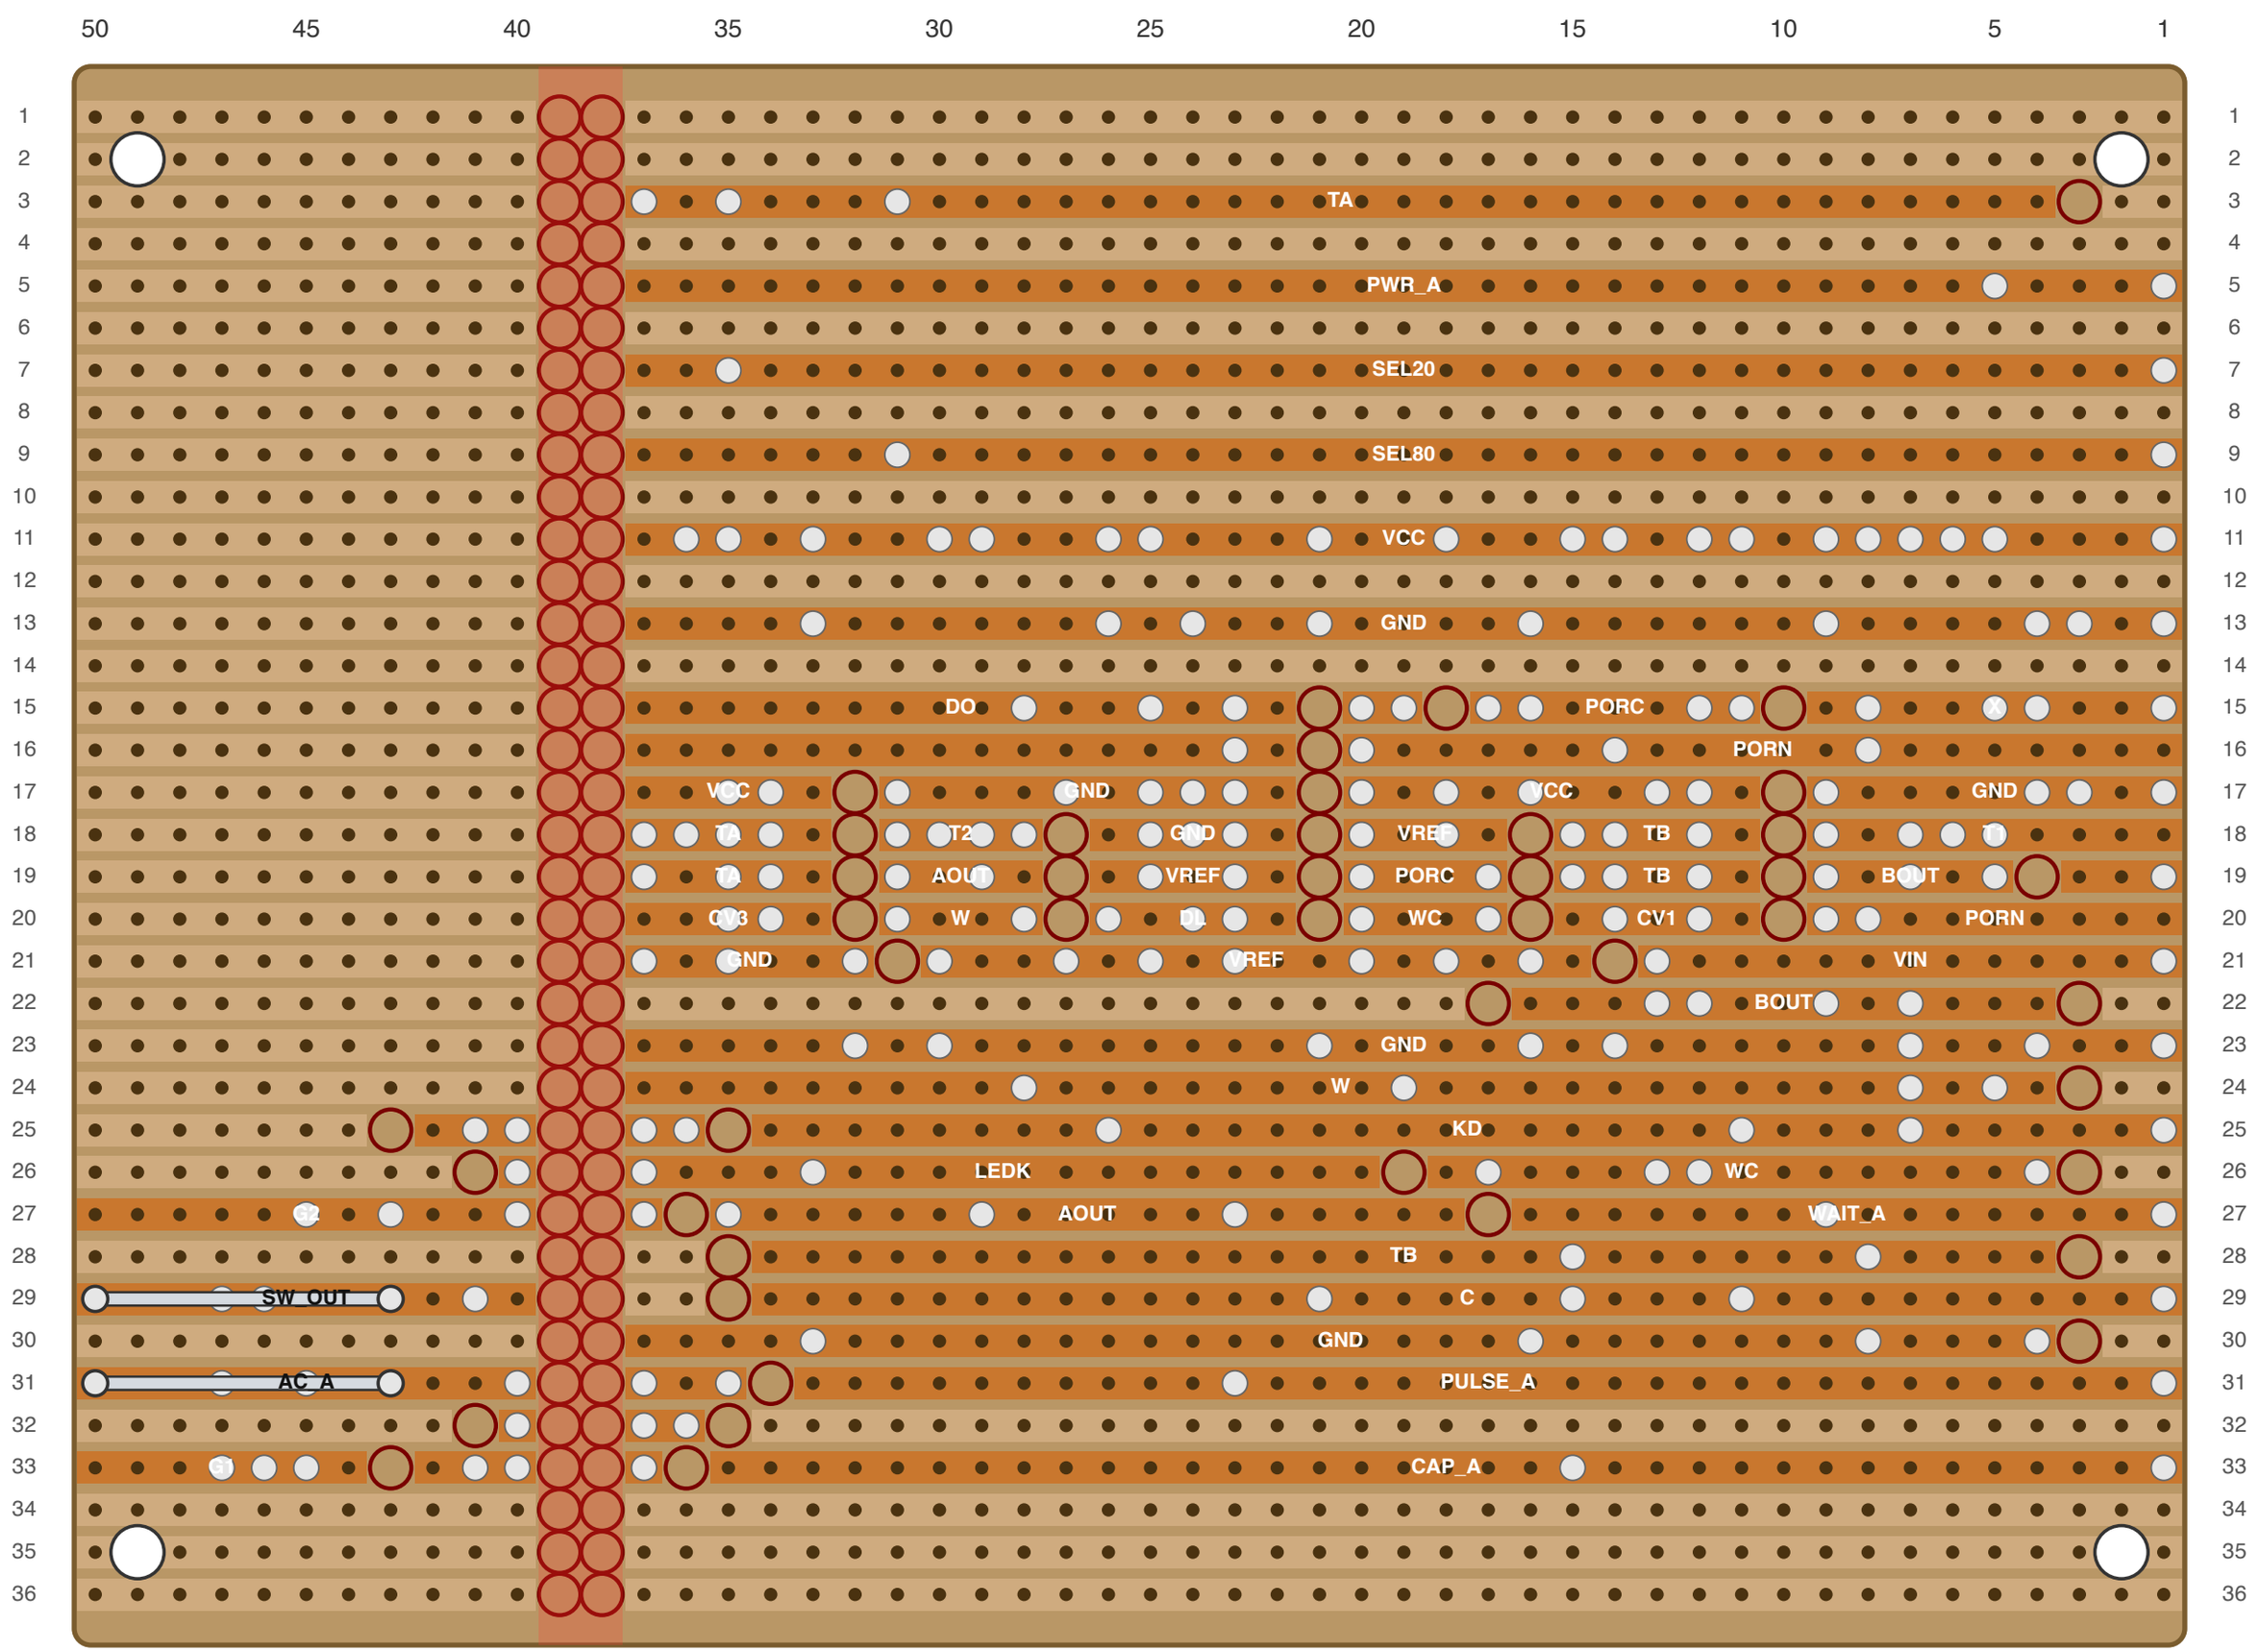

COPPER SIDE (board flipped left-to-right: column 1 is now on the RIGHT). Dark rings = track cuts. Light dots = solder joints.

On the isolated side (left here) lift off every unused strip between used ones, then lacquer.